# 1. GENERAL INFORMATION

1-1	TORQUE VALUES	1-5
1-1	TOOLS	1-7
1-2	<b>CABLE &amp; HARNESS ROUTING</b>	1-9
1-3		
	1-1 1-2	1-1 TOOLS 1-2 CABLE & HARNESS ROUTING

# **GENERAL SAFETY**

#### WARNING

If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas.

### WARNING

The battery generates hydrogen gas which can be highly explosive. Do not smoke or allow flames or sparks near the battery, especially while charging it.

#### WARNING

Gasoline is extremely flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks in your work area.

#### **WARNING**

The battery electrolyte contains sulfuric acid. Protect your eyes, skin and clothing. In case of contact, flush thoroughly with water and call a doctor if electrolyte gets in your eyes.

## SERVICE RULES

- Use genuine HONDA or HONDA-recommended parts and lubricants or their equivalents. Parts that don't meet HONDA's
  design specifications may cause damage to the Four Trax.
- 2. Use the special tools designed for this product to avoid damage and incorrect assembly.
- Use only metric tools when servicing this Four Trax. Metric bolts, nuts and screws are not interchangeable with English fasteners.
- 4. Install new gaskets, O-rings, cotter pins, and lock plates when reassembling.
- When tightening bolts or nuts, begin with the larger-diameter or inner bolt first. Then tighten to the specified torque diagonally in 1-5 steps, unless a particular sequence is specified.
- 6. Clean parts in non-flammable or high flash point solvent upon disassembly.
- 7. Lubricate any sliding surfaces before reassembly.
- 8. After reassembly, check all parts for proper installation and operation.