

FEATURES AND CONTROLS

⚠ WARNING


Operating the ATV on streets or roads, especially in darkness, could result in an accident and serious injury or death.

Your ATV is not equipped with highway-approved lights. It's designed for and must be used for *off-road use only*. Use caution and drive at reduced speeds in conditions of reduced visibility such as fog, rain and darkness.

Light Switches

The light switch is located on the left handlebar (1). It's used to turn the lights on and off.


NOTE: The lights won't work unless the key is in the ON position and the shut-off switch is in the RUN position.

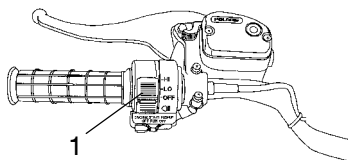

Indicator Lights

With the engine running, verify the function of all indicator lights each time the ATV is used.

NOTE: The taillight is on whenever the main switch (key) is on. Turn the key off to prevent battery drain.

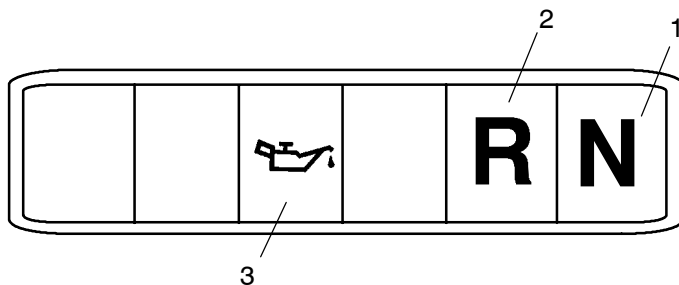

1. **Transmission Neutral Indicator**
2. **Transmission Reverse Indicator**
3. **Oil Warning** (indicates a low oil level).