

3-38 FUEL SYSTEM (DFI)



Water Temperature Sensor (Service Code/Character-14/AqUt)

Water Temperature Sensor Removal/Installation

CAUTION

Never drop the sensor, especially on a hard surface. Such a shock to the sensor can damage it.

- Disconnect the sensor connector [A], and unscrew the water temperature sensor [B].

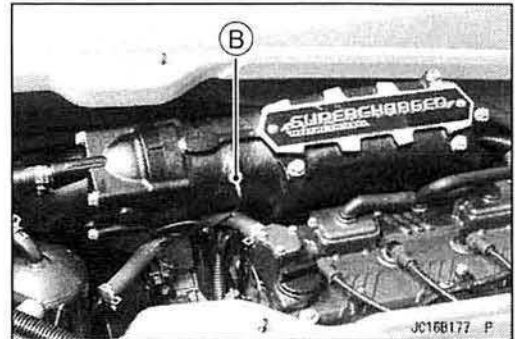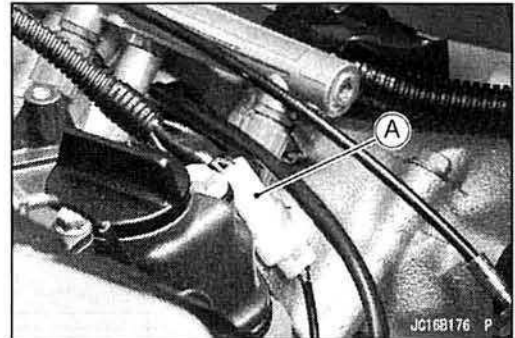

- Fill the hollow of the exhaust pipe [A] with the engine oil (10W-30) [B] or the specified silicone grease [B] as shown, before installing the water temperature sensor [C]. [D] 5 mm (0.2 in.)

Silicone Grease-Grease, SCH-20: 92137-1002

- Tighten:

Torque - Water Temperature Sensor: 15 N·m (1.5 kgf·m, 11 ft·lb)

NOTE

- When filling the engine oil in the hollow of the exhaust pipe, remove the exhaust pipe. Fill the engine oil and install the water temperature sensor.
- Do not overfill the engine oil or silicone grease, or fitting boss could be damaged.

Output Voltage Inspection

NOTE

- Be sure the battery is fully charged.
- Remove the ECU (see ECU Removal). Do not disconnect the connector.

