

TABLE OF CONTENTS

SECTION	SUB-SECTION
01	SUSPENSION <ul style="list-style-type: none"> 01 – Bogie wheel (refer to '78 Shop Manual) 02 – Slide suspension 03 – Rear hub (refer to '78 Shop Manual) 04 – Drive axle 05 – Track (refer to '78 Shop Manual)
02	TRANSMISSION <ul style="list-style-type: none"> 01 – Pulley guard 02 – Drive belt 03 – Drive pulley (refer to '78 Shop Manual) 04 – Driven pulley and countershaft 05 – Pulley alignment 06 – Brake 07 – Chaincase 08 – Gearbox (refer to '78 Shop Manual) 09 – Drive chain
03	STEERING/SKI <ul style="list-style-type: none"> 01 – Steering system 02 – Ski system
04	ENGINE <ul style="list-style-type: none"> 01 – Engine tolerances measurement 02 – Engines 03 – Rewind starter (refer to '78 Shop Manual) 04 – Timing 05 – Carburetor 06 – Air intake silencer and fuel tank
05	ELECTRICAL <ul style="list-style-type: none"> 01 – Electrical charts 02 – Spark plugs 03 – Test procedure 04 – Electric starter (refer to '78 Shop Manual) 05 – Battery (refer to '78 Shop Manual) 06 – Alternator (refer to '78 Shop Manual)
06	CAB & FRAME <ul style="list-style-type: none"> 01 – Cab 02 – Frame
07	TOOLS
08	TECHNICAL DATA
09	WARRANTY